

HOLMAN

RGB Colour *Bluetooth*[®] Garden Light Controller



DOWNLOAD THE
LATEST MANUAL!

User Guide

Connecting the Cables

Ensure you have the compatible cables for your controller.

CLBRGB60

 
4-Pin Plug + Socket

Connect the power cable to an outdoor power point. Ensure the socket is weatherproof if you have mounted your controller outdoors. Ensure the **Plug + Socket** cable ends are touching and the caps are hand tightened only. An end cap is provided on each cable to weatherproof the last connector.

Setup Example (Connect up to 60W of Lights)

Example using **RGB Colour 4-Pin Plug + Socket** only.

- ❗ Only use lights within one colour system, lights can not be controlled individually.
- ❗ This controller has a capacity of 60W. Power is consumed by both the lights and the cable. It is best to connect **no more than 55W of lights**, and **no more than 75m of cable** to a controller.
- ❗ This controller has an automatic power overload switch that will turn the lights off if too much power is being consumed.

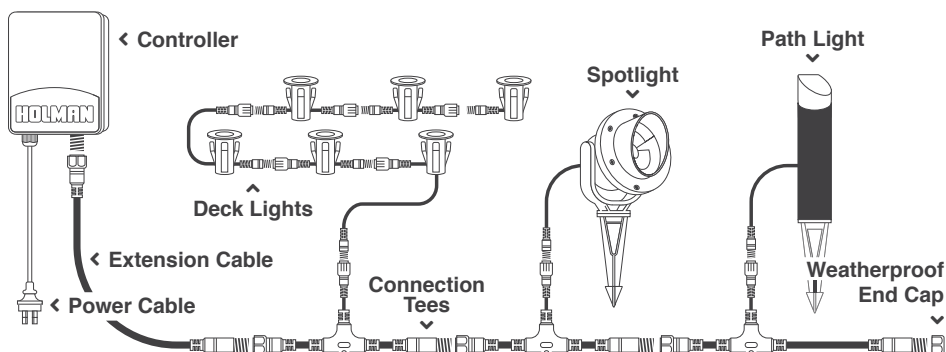


Lighting Scenes



Spotlights:

 Great for illuminating individual plants or trees and turning them into a garden feature.

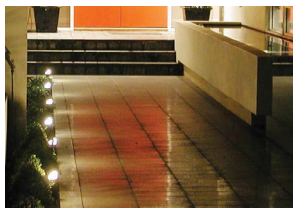

Path Lights:

Create a statement entrance to your home by lighting pathways around your front door.



Deck Lights:

Light up the perimeter of your deck to enhance your outdoor entertaining area.

Mounting the Controller

Our **Plug + Socket** system means expansion is easy with no electrician required. Install the controller near a 240V AC power point ideally located in a house, garage, or exterior electrical cubicle. For ease of use, eye level placement is recommended. Ideally, your controller location should not be exposed to rain or areas prone to flooding or heavy water. This controller comes with an internal transformer installed in a weatherproof enclosure. The housing is designed for indoor or outdoor installation but the power cable needs to be plugged into an outdoor power point under cover. Drill a hole suitable for a wall plug and insert a screw with a minimum 7mm wide screw-head. Hang the controller over the screw head using the key hole slot positioned externally on the top centre of the back of the controller. If your controller requires extra support you can drill an additional hole and fasten it through the spare holes positioned internally under the terminal cover.



WARNING!

**KEEP NEW OR USED
BUTTON/COIN
BATTERIES OUT OF
REACH OF CHILDREN**

 
 
 


The battery can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body. If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention

Contact the **Australian Poisons Information Centre** for 24/7 fast, expert advice: ☎ **13 11 26**

Refer to your local government guidelines on how to correctly dispose of button/coin batteries.

Downloading iGardener™

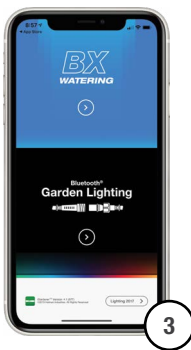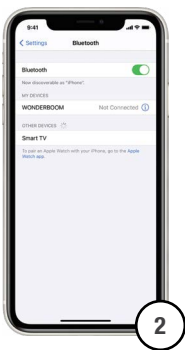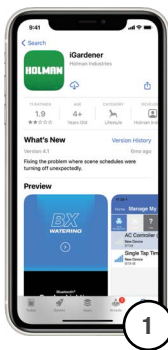

Step 1:

Download the **iGardener™** app from the [App Store](#) or [Google Play](#).

Step 2:

Enable **Bluetooth®** on your device.

Step 3:

Ensure your controller is connected to power. Open the **iGardener™** app and navigate to **Garden Lighting**.

Visit www.holmanindustries.com.au/instruction-manuals or scan the QR Code for a comprehensive guide on using the **iGardener™** app. **Bluetooth®** compatible controllers are designed to be operated via the **iGardener™** app only.



Troubleshooting

Lights are not turning on: Ensure the controller is connected to a power point and turned on. Check all **Plug + Socket** cables are properly connected. Check that you have not connected too many lights to one controller—do not exceed 60W. Check that the lights are switched on via the **iGardener™** app.

Lights are too dim or not turning on: Connecting excessive lengths of cable will result in wattage loss. Try to use the least amount of cable length as possible.

HOLMAN

RGB Colour *Bluetooth*[®] Garden Light Controller

Warranty Information

2

YEAR
WARRANTY

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In addition to the rights and remedies you have under laws relating to your Holman product, we also provide you with a Holman warranty. Holman warrants this product against defects caused by faulty workmanship and materials for 2 years from the date of purchase.

During this warranty period Holman will replace any defective product. In the event of a product being replaced during the warranty period, the warranty on the replacement product will expire 2 years from the purchase date of the original product, not 2 years from the date of replacement.

To the extent permitted by law and without limiting the consumer guarantee, this Holman Replacement Warranty only covers products that have been put to domestic use, and excludes liability for consequential loss or any other loss or damage caused to property of persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some advice, contact Holman Industries:

1300 716 188

support@holmanindustries.com.au

11 Walters Drive, Osborne Park 6017 WA

If you consider that this warranty covers your defective product, present your defective product and your receipt as proof of purchase to the place of purchase, where the retailer will replace the product for you on our behalf.

Customer Service
support@holmanindustries.com.au
www.holmanindustries.com.au

RWC Reliance Worldwide
Corporation (Aust.) Pty. Ltd.
27-28 Chapman Place
Eagle Farm, QLD, Australia 4009



**PRODUCT CODE: CLBRGB60 — RGB COLOUR
BLUETOOTH[®] GARDEN LIGHT CONTROLLER**

App Store[®] is a trademark of Apple Inc. / Google Play and the Google Play logo are trademarks of Google LLC. The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Holman Industries is under license. Other trademarks and trade names are those of their respective owners. Please read these instructions in full before proceeding with setup. Copyright © RWC 2025.

HOLMAN

For the #SMARTGARDENER   

We really appreciate having you as a customer, and would like to say thank you for choosing us.

We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an extended warranty. Keep up to date to with product information and special offers available through our newsletter.

www.holmanindustries.com.au/product-registration/



Thanks again for choosing Holman

IS1165 REV-