

Introduction.....p1
 Glossary.....p2
 Battery Installation.....p3
 Tap Timer Installation.....p4
 Programming
 Timer Programming Controls.....p5-6
 Set Automatic Watering.....p7-8
 Automatic Watering Delay.....p9
 Practical Case Study.....p10
 Manual Watering.....p11-12
 Technical & Warning Datap13
 Warranty.....p14



CO1603 - Low Pressure Tap Timer

Thank you for purchasing this device, please read the operating instructions carefully to familiarize yourself with the features and modes of operation before using the Low Pressure Tap Timer.



1. Universal Tap Adaptor
2. Tap Connection
3. Union Nut
4. Control Dials
5. Battery Compartment
6. Snap-on Hose Connection

 
1. 2.



1 year guarantee
CO1603 N10372 CE
INSTRUCTION MANUAL

Battery Installation

- Hold the tap timer with the battery compartment facing you.
- Remove the battery compartment cover & the battery tray.
- Insert 2 x AAA Alkaline batteries.
- Insert the battery tray and replace the battery compartment cover ensuring everything is tightly closed and that the battery compartment stays dry.

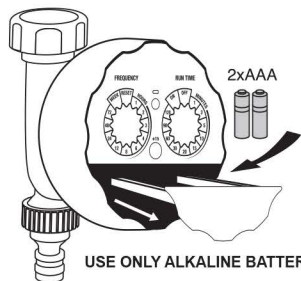

USE ONLY ALKALINE BATTERIES.

When setting a new program, put the dial in the 'OFF' position.

Tap Timer Installation

Make sure the filter (washer) is in place, then screw the tap timer to the faucet/tap by attaching the side with the female swivel hose thread connector to the tap or hose end, then turn it clockwise (hand tighten only). Connect the tap timer hose male thread side to your system.

 


Low Pressure Tap Timer - Programming Controls

The Low Pressure Tap Timer is programmed using three individual controls - 2 Dials and an Enter button.

The left dial can be turned to select the 'Frequency' of watering (how often you want to set the tap timer to water).

The right dial can be turned to select the 'Run Time' for watering (The length of time you want to set the tap timer to water).

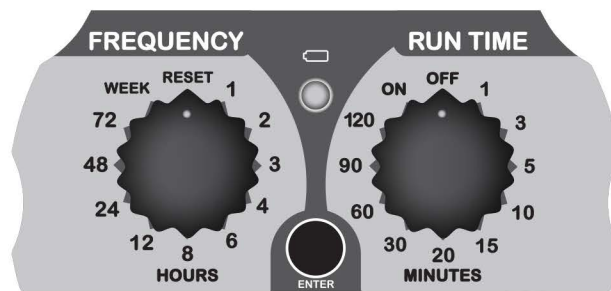


The 'Enter' button performs 2 important tasks:
 1. Press the 'Enter' button to confirm your selections, activating the watering operation. You must hold the 'Enter' button for 3 seconds, and the LED will go solid to confirm then flash off.

2. 'Enter' can be pressed again after confirming 'Frequency' & 'Run Time' to move the watering 'Start Time' forwards by '1' hour to delay it. Every press adds '1' extra hour to your start time. (optional) The LED will flash every time you press the 'Enter' button to confirm.


Set Automatic Watering

Frequency (Watering Interval)
 Select from 1 hour to 7 Days

 Turn the left dial to select the interval between watering.

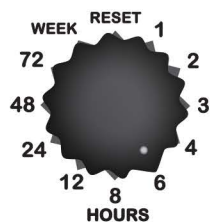

Run Time
 Select from 1-120 minutes

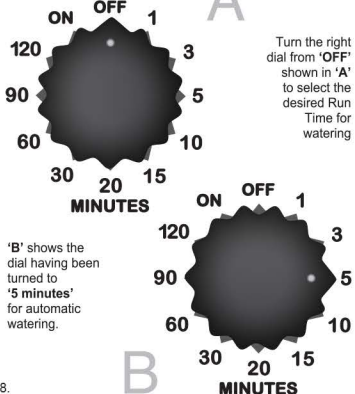 

Turn the right dial from 'OFF' shown in 'A' to select the desired Run Time for watering

'B' shows the dial having been turned to '5 minutes' for automatic watering.

Automatic Watering Delay

Once you have made your selections, press and hold the 'Enter' button for 3 seconds, until you see the LED light appear solid.



This will now have confirmed the watering operation.

Setting A Start Time Delay

To set a delay in the 'Start Time' for watering, immediately after confirming your automatic watering selections, you can press the 'Enter' button again to tell the tap timer that you want it to be delayed by 1 hour.

Each press equals 1 extra hours delay and you can press it from 0 - 23 hours depending on your requirement. Each press will be followed by the LED flashing once for confirmation.

1X = +1HR
 2X = +2HR ...and so on.

Practical Case Study

Working Example:

It's 12:00 presently and you want to water at 14:00 for 60 minutes and every two days.

1. Frequency

 


2. Run Time




- 1 - Frequency: Set to 48
- 2 - Run Time: Set to OFF
- 3 - Run Time: Set to 60
- 4 - Press / hold Enter for 3 seconds until solid light confirms selection
- 5 - +2H (Press 'Enter' twice)

3. Run Time

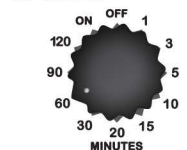

4. 3 sec → X1
5. X2 → X2

 Manual Watering

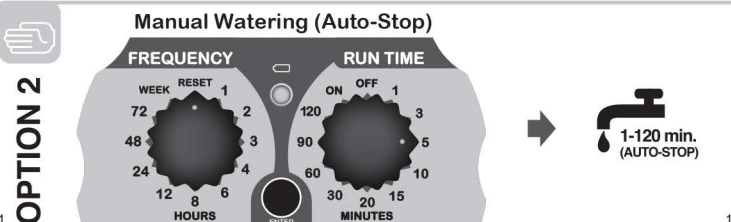

Technical & Warning Data

HOLMAN - Low Pressure Tap Timer
 Product Code: CO1603.
 Maximum Water Pressure: 600 KpA.
 Battery: Use 2 x AAA Alkaline Batteries.
 Fluid: Only use cold water with NO added chemicals.
Frequency Options:
 Every 1 hrs, 2hrs, 3hrs, 4hrs, 6hrs, 8hrs, 12 hrs, 24 hrs, 48 hrs, 72 hrs, Week, Reset.
Run Time Options:
 1, 3, 5, 10, 15, 20, 30, 60, 90, 120, ON or OFF.

Warnings:
 If the Low Pressure Tap Timer is going to be left for an extended period of time, please ensure the battery is replaced before doing so.
 Do not use this device without the appropriate filter.



Every 4 seconds the LED will flash once to confirm the battery is working. If the LED flashes any quicker it means the battery is low. Please replace the battery at this point.

Warranty



Warranty: We will honour all statutory guarantees that this product is of acceptable quality. (including that it is fit for purpose)

HOLMAN Industries:
 47 Walters Drive,
 Osborne Park, WA 6017.
 Ph: +61 8 9204 1011
www.holmanindustries.com.au

