

### 140mm Smart Flood Light Twin Pack



www.holmanindustries.com.au

### **User Guide**

Scan here for the latest manual or visit https://www.holmanindustries.com.au/product/ 140mm-smart-flood-light-twin-pack



IOS is a trademark of Apple Inc. Android is a trademark of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Holman Industries is under license. Other trademarks and trade names are those of their respective owners. All other content is Copyright ® Holman Industries 2022.

#### PRODUCT CODE: SWC2000

2 of 20

# Contents

Overview	4
Package Content	4
Setup	5
Preparation	5
Pairing	7
Key Functions	10
Dimmer	10
Pallete (Scene)	11
Music	12
More	12
Troubleshooting	15
Specifications	17
Warranty	19

### **Overview**

### Package Content

- 1. 2 × 6W Bluetooth Mesh Flood Lights [a] IP65
- $2. \quad 2 \times \textbf{Ground Spikes} \ [b]$
- 3.  $2 \times Hardware$  for wall mounting
- Plug in Power Supply [c], for outdoor power point (GPO), DC Adaptor [d] IP67, 90cm from plug to DC Adaptor, 3m from DC Adaptor to the first light

**A** No modification or addition to the light configuration is possible



# Setup

#### Preparation

- Ensure that the power point is no more than 3m away, there is no extension or modification for the cable
- If the ground spikes are being used, these can be attached by hand without tools, use the swivel bracket to move the light out of the way for this
- If the lights are being attached to the wall, mark out their positions ensuring that everything is within the limits of the cable
- Plug the Floodlights into their cable, before connecting ensure the red O-Ring [a] is in place (for electrical protection) and that the plug is correctly oriented
- Once the plugs are connected screw down the threaded cover onto the plug connection

 Plug in the power cord to the power point (GPO) and observe the lights, they should be flashing white (pairing mode). If the lights are not flashing white, turn the power point on/ off/on/off/on to get the lights into pairing mode



### Installing Holman Home

1. Download *Holman Home* to your mobile device via the

**É App Store** or





2. Open *Holman Home* on your mobile device

- You may be prompted to allow notifications-the app can still function if you choose to opt out
- 3. Tap SIGN UP
- Read our User Agreement and Privacy Policy and tap AGREE if you wish to proceed
- Follow the prompts to register a *Holman Home* account with your email address

### A Ensure your country details are correct at this stage

- You must allow the 'Discovering Nearby Device' permission (or Bluetooth® permission, depending on your phone operating system) – this allows Bluetooth® mesh products to be added into Holman Home
- You may be prompted to allow access to your location. This allows the app to show weather information-it will still function if you choose to opt out

#### Bluetooth® Connetion

- Ensure you and your smartphone are close to your light kit during the connection process - you may need to prompt pairing mode
- Your lighting kit will perform preset schedules from the app, even if your smartphone is out of *Bluetooth* connection range (schedules must be sent within Bluetooth range)

#### Pairing

- Pairing of the flood lights is via Bluetooth<sup>®</sup> Mesh, please ensure you have allowed the Bluetooth<sup>®</sup> (*iOS*) or Nearby Devices (Android) permission
- 2. These lights will flash white/fast to indicate they are ready to pair (default/pairing mode)
- Tap 'Add Device' from the Holman Home Home screen, you will see the flood lights appear under 'Discovering devices'



- 4. Press 'Add' to commence pairing
- When you see the blue circle [a] appear on the 'Add Device' screen please tap this (or 'Add All' [b]) to commence pairing



 After 30 seconds to 1 minute the light will be successfully added



### Pairing (continued)

7. Tap 'Done' to complete pairing. You will now see the lights on the home page If you are still within Bluetooth® range you will see a power on/off icon [c]
8. If you're out of range, the Bluetooth® [d] symbol will appear greyed out
8. If you're out of range, the Bluetooth® [d] symbol will appear greyed out
8. If you're out of range, the Bluetooth® [d] symbol will appear greyed out
8. If you're out of range, the Bluetooth® [d] symbol will appear greyed out
8. If you're out of range, the Bluetooth® [d] symbol will appear greyed out
8. If you're out of range, the Bluetooth® [d] symbol will appear greyed out
8. If you're out of range, the Bluetooth® [d] symbol will appear greyed out
8. If you're out of range, the Bluetooth® [d] symbol will appear greyed out
8. If you're out of range, the Bluetooth® [d] symbol will appear greyed out
8. If you're out of range, the Bluetooth® [d] symbol will appear greyed out

9 of 20

d

# **Functions**

### **Key Functions**

- Menu options at the bottom of the home screen
- 1 Dimmer - RGB/W mode, colour selection
- 2. Pallete Scenes
- 3. Music
- More includes schedule

#### Dimmer

- Top left light name (tap 3) dots to top right to change this) [a]
- Switch [b] toggle the light on/off

Colour or White selection [c] tap the word to move between options

 Colour selection [d] - tap to move the bulb icon between colours (current colour is displayed at the top right of the screen as the light circle, inside this is the colour name Brightness - slide your finger along the bar to reduce brightness



# **Functions**

### **Key Functions (continued)**



Brightness - slide your finger along the bar [a] to reduce brightness

A White mode screen brightness changes slide up/down



### Pallete (Scene)

• Tap the **Scene** to apply it to the light



A Be mindful this is per light - not for both



# Functions (continued)

#### Music

B Requires audio recording permission, as this uses the device microphone to work



The light will change colour (dance) to the beat



#### More



Schedule -tap to set a regular timer for each light





Default Light - tap to choose the default light state when the light comes on

**B** Switch Gradient – tap to select dimming on start up/ turn off (in seconds)



### Functions (continued)

### More (continued)

### **Setting Schedule**

 Schedules are set for on or off - one of each is needed for regular on/off timing

• Tap the blue circle [a] to create a Schedule, select 'Local Timer' from the menu



 24hr (military) time is used for setting the schedule



• For day of the week selection blue squares are 'on' (selected) [b], while black squares are 'off' (not selected) [c]

### Functions (continued)

#### More (continued)



 Tap 'Action' [c] to select on/off as the action for the schedule

Example - complete schedule ON/OFF weekend use



# Troubleshooting

1 user at a time, if more than 1 person is trying to enter the light they will not be be able to get control until the first person has exited the top right of the screen, then '**remove device**' [c] at the bottom of the screen

The primary user (current user) will see a green [a] on/ off power icon when they have control

Other users within the same home will see a **Bluetooth®** symbol [b] with a cross through it.



Bluetooth Flood Light

Bluetooth Flood Light

To take control, attempt to open the light in the app, you may need to open/close more than once to gain/ regain control

To remove the device from Holman Home, tap the '...'

1009 0	♥_d 8×0%
<	
Bluetooth Flood Light	20
Device Information	
Tap-to-Run and Automation	
Device Offline Notification	
Offline Notification	
Others	
Share Device	
Create Group	
Location Information	Do Not Allow 2
FAQ & Feedback	
Add to Home Screen	
Device Update No upd	intes available >
Remove Device	~
- h	c )
``	$\bigcirc$

# Troubleshooting

Because this device is
Bluetooth® there is no
'cloud' connection, the
device will only offer
'Disconnect and wipe
data'



Once the device is removed. it will return to pairing mode. This is confirmed by the lights turning white and flashing fast again

### Need help? Just ask!

The Holman website has a host of additional information on features. Head to support.holmanindustries.com.au for more tips, tricks and support content.





# **Specifications**

#### **Ground Light**

Input	240V AC
Input	2407 AG
Output	12V DC
Light Output	6W per light
Pack Output	12W total
Brightness	1040lm
Size	165mm
Height	275mm
Colour	RGBW Multi
Waterproof Rating	IP65
Housing	Metal

# Warranty

#### 2 Year Replacement Guarantee

Holman Industries offers a 2 year replacement guarantee with this product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

As well as your statutory rights referred to above and any other rights and remedies you have under any other laws relating to your Holman product, we also provide you with a Holman guarantee.

Holman Industries guarantees this product against defects caused by faulty workmanship and materials for 2 years domestic use from the date of purchase. During this guarantee period Holman Industries will replace any defective product. Packaging and instructions may not be replaced unless faulty.

In the event of a product being replaced during the guarantee period, the guarantee on the replacement product will expire 2 years from the purchase date of the original product, not 2 years from the date of replacement. To the extent permitted by law, this Holman Replacement Guarantee excludes liability for consequential loss or any other loss or damage caused to property of persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some clarification or advice please contact us directly:

#### 1300 716 188 support@holmanindustries.com.au

11 Walters Drive, Osborne Park 6017 WA

If you are certain your product is defective and is covered by the terms of this warranty, you will need to present your defective product and your purchase receipt as proof of purchase to the place you purchased it from, where the retailer will replace the product for you on our behalf.







### Thanks for being a #SMARTGARDENER





We really appreciate having you as a customer, and would like to say thank you for choosing us.

We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an extended warranty. Keep up to date to with relevant product information and special offers available through our newsletter.

www.holmanindustries.com.au/product-registration/



Copyright © 2023 Holman Industries