

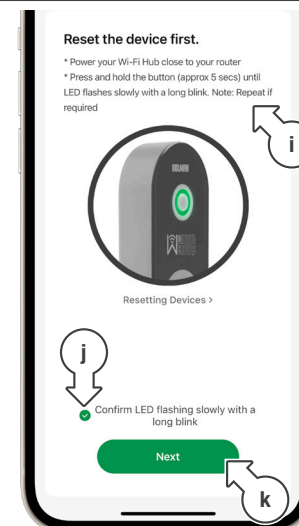
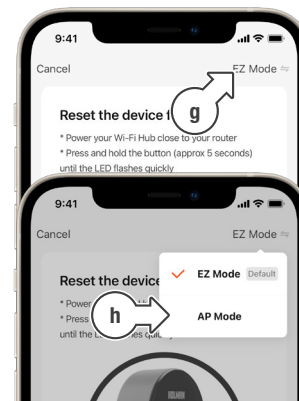


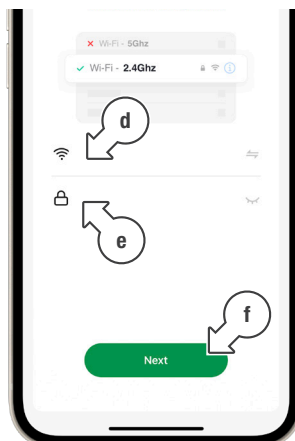

ADDING YOUR WI-FI HUB TO HOLMAN HOME USING AP MODE


1. Plug your **Wi-Fi Hub** into a power source near your Wi-Fi router
2. Open **Holman Home** and add a new device by tapping **+** [a] on the **HOME** screen
3. Tap **GARDEN WATERING** [b] and choose **Wi-Fi HUB** [c]
4. Enter your Wi-Fi network [d] and password [e], then tap **NEXT** [f]
5. On the following screen, tap **EZ MODE** [g]
6. From the drop-down menu, tap **AP MODE** [h]
7. Reset the **Wi-Fi Hub** as per the instructions provided on-screen [i]
8. Once the **Wi-Fi Hub** is flashing accordingly, check the LED confirmation toggle [j] and tap **NEXT** [k]

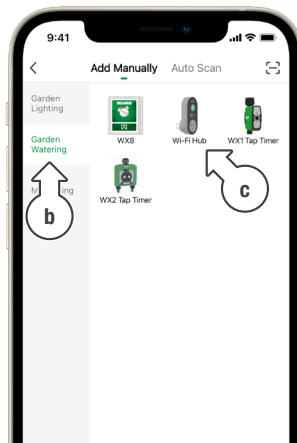


i The Wi-Fi Hub has three flashing modes:

- Fast flash
- Slow flash
- Slow long blink


9. On the following screen, tap **GO TO CONNECT** [l]

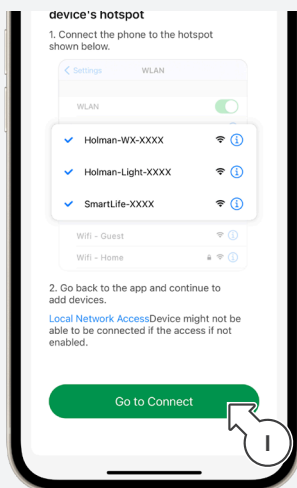


10. **iOS only:** If redirected to **SETTINGS**, tap **Wi-Fi** [m]

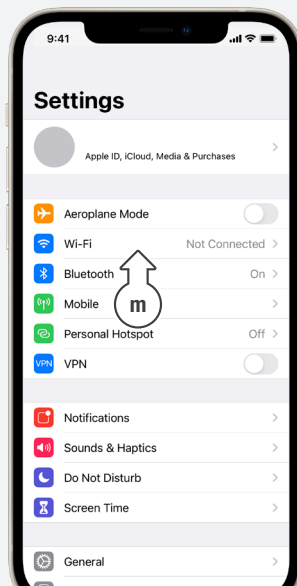

11. **iOS only:** Tap **Holman-WX-XXXX** [n] and wait until the network is connected

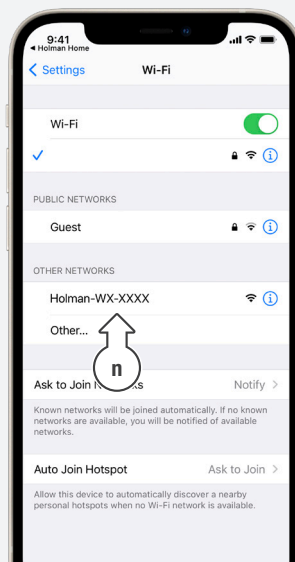


12. **Android only:** Tap the **Holman-WX-XXXX** [o] and wait until the network is connected

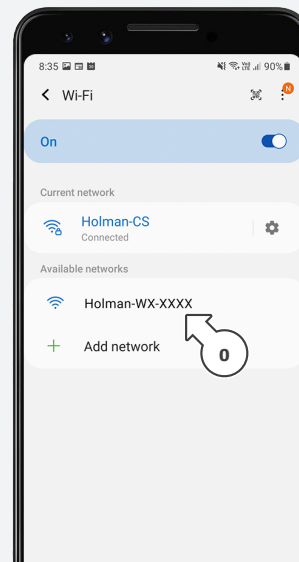

13. **iOS or Android:** If the **Holman-WX-XXXX** network does not show in your Wi-Fi settings, try the following:


- ✓ Disable Wi-Fi on your smartphone, wait a few moments and turn Wi-Fi back on
- ✓ You may need to reset your **Wi-Fi Hub** again; Hold the button for approximately 5 seconds to change to fast-flash mode, then hold the button again for approx 5 seconds to change back to slow-flash mode

13. **Android only:** Ignore messages such as "Connected without internet" and tap **<** in the Android nav bar to ignore [p]

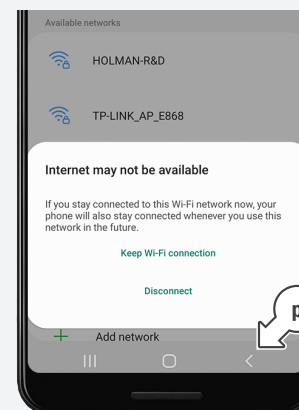


ADDING YOUR WI-FI HUB (Continued)


14. **Android only:** Once **Holman-WX-XXXX** is the active network, return to **Holman Home** using by tapping the multi-screen icon [q]

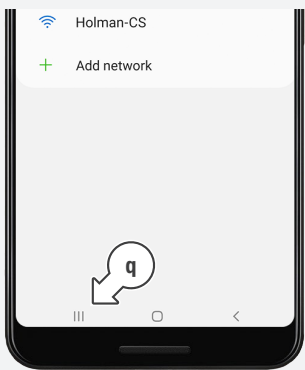


15. **iOS only:** Once **Holman-WX-XXXX** is the active network [r], return to **Holman Home** using by tapping the **Holman Home** shortcut [s]

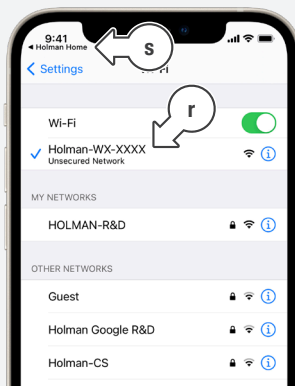


16. Wait while your **Wi-Fi Hub** is being added to **Holman Home** [t]

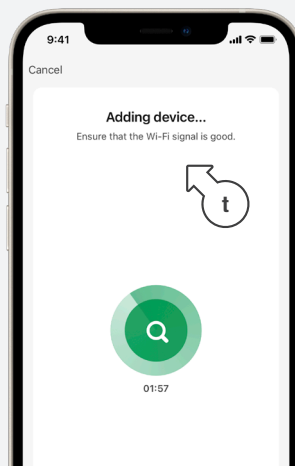

17. If your **Wi-Fi Hub** [u] connects successfully, tap **DONE** [v]

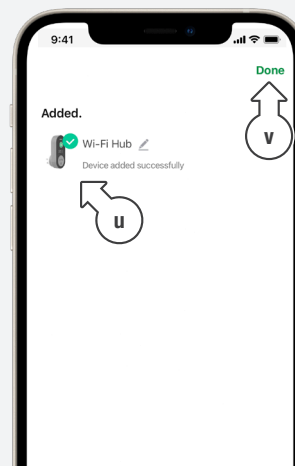

18. After confirming the connection, tap **ADD/VIEW DEVICES** [w] and follow the prompts to connect the **Wi-Fi Socket** and **WX1 Tap Timer**

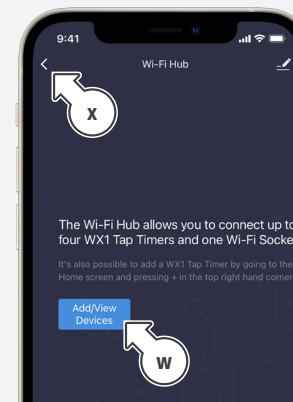


- ⚠** If this method of connecting the **WX1 Tap Timer** and **Wi-Fi Socket** does not work, tap the back button [x] to go back to the **HOME** screen, and follow the next set of instructions for an alternative connection method

ADDING YOUR WX1 TAP TIMER AND WI-FI SOCKET TO HOLMAN HOME


1. Ensure your **WX1 Tap Timer** is close to your router and install 4x 1.5v AA alkaline batteries [a]




2. From the **HOME** screen tap **+** [b] to add the **WX1 Tap Timer** and **Wi-Fi Socket**

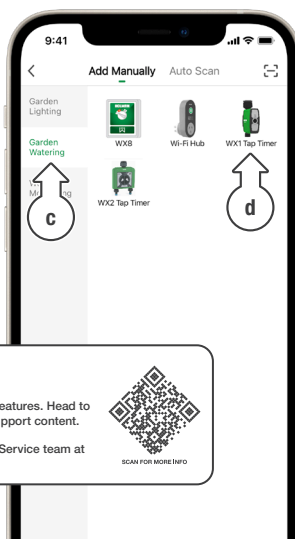


3. Tap **GARDEN WATERING** [c] and choose **WX1 Tap Timer** [d] When a **GATEWAY** [e] is requested, select **Wi-Fi HUB** [f]

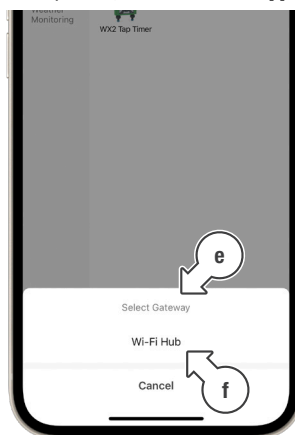

4. Reset the **WX1 Tap Timer** as per the instructions provided on-screen [g]
5. Once the **WX1 Tap Timer** is flashing accordingly, check the LED confirmation toggle [h] and tap **NEXT** [i]
- i** If your **WX1 Tap Timer** fails to add to **Holman Home**, restart the app, and start the process again to add your **WX1 Tap Timer** and **Wi-Fi Socket**

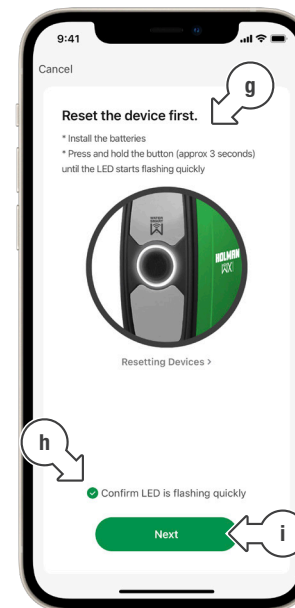

6. Wait until both the **WX1 Tap Timer** [j] and **Wi-Fi Socket** [k] have been added, then tap **DONE** [l]

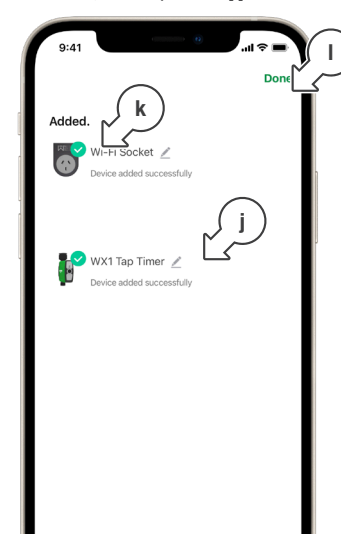

HOLMAN

For the #SMARTGARDENER



WX1 Setup Process Workaround

For additional help, visit <https://www.holmanindustries.com.au/>