

HOLMAN



Wi-Fi Tap Timer
with 4 Outlets

Instruction Manual

SKU: WX4TH
IS1187 REV -



RoHS CE

Customer Service

support.holmanindustries.com.au
www.holmanindustries.com.au

RWMC Reliance Worldwide
Corporation (Aust.) Pty. Ltd.

27-28 Chapman Place
Eagle Farm, QLD, Australia 4009

Please be sure to read through all the instructions
before attempting to use your product.

iOS is a trademark of Apple Inc. Android is a trademark of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. All other content is Copyright © Reliance Worldwide Corporation (Aust.) Pty. Ltd. 2026.

Contents

Overview	4
Components	4
WX4 Tap Timer Features	6
Compact Wi-Fi Hub Components	8
Compact Wi-Fi Hub Features	8
WX4 Tap Timer LED Status	9
Compact Wi-Fi Hub LED Status	9
Installation	10
Mounting the WX4 Tap Timer	10
Setup	11
Installing Holman Home	11
Pair Wi-Fi Hub Using AP Mode	12
Add the Wi-Fi Hub to Holman Home	14
Add the WX4 to Holman Home	16
Operation	18
WX4 Tap Timer Status	18
WX4 Tap Timer Manual Controls	19
WX4 Tap Timer Scheduling	20
Additional Notes	23
Low Battery Notification	23
Compatibility	24
Smart Moisture Sensor [WXMS]	24
Maintenance	25
Cold Weather	25
Batteries	25
Connection Issues	25
Warranty	26

Overview

Components

- a. 1.5m USB-A to USB-C cable
- b. Compact Wi-Fi Hub
- c. 1× 20/25mm BSP reducing bush
- d. 1× 25mm BSP tap nut inlet
- e. **ZONE 1** outlet
- f. **ZONE 2** outlet
- g. **ZONE 3** outlet
- h. **ZONE 4** outlet
- i. 4× 12mm snap-on hose fittings on 20mm BSP outlets
- j. **MAIN DIAL**
- k. **START/STOP** button
- l. LED indicator Light
- m. Battery compartment (underneath): requires 4× AA alkaline batteries (sold separately)

⚠ Do not mix old and new batteries

n. Support bracket

o. Plastic brace

p. 2× Machine screws M3× 10mm

q. 1× Machine screw M4× 20mm, with screw nut, gaskets and washer

r. 4× Machine screws M4× 40mm

s. 4× Wall plugs

ℹ Recommended drilling hole 6mm

t. 2× Cable ties

u. 3× ¾" Caps; to be used on zones that are not in use



Overview

Components (continued)



Overview

WX4 Tap Timer Features

- Set and check watering schedules from **Holman Home** on your smartphone, anywhere internet access is available
- Water flow meter function (available in **Holman Home**) to measure water usage of each outlet
- Irrigation and Mist modes for different watering functions
- Works with the **HOLMAN Wi-Fi Moisture Sensor** (SKU: WXMS — sold separately) to record and automate based on soil moisture
- Manual watering: If dial is on a **ZONE** and user presses **START/STOP**, watering will commence for the selected **ZONE**
 - **i** Default manual run time is 1 minute however this can be changed in **Holman Home**
 - **i** If **START 1** has not been setup and enabled for a **ZONE**, no watering will occur for that particular **ZONE**
- 60m range between **WX4 Tap Timer** and Hub
- Low battery indicator
- IP54 dust and water protection rating

Overview

WX4 Tap Timer Features (continued)

- Zones: 4
- No. of starts per program: 3
- Watering schedules: 7-day, interval, odd, even, cycle
- Power source: 4× 1.5V AA alkaline batteries
- Housing: outdoor
- Electrician required: no
- 50-800kPa working pressure
- 3°C-50°C ambient working temperature


⚠ For use with cold water only

- Maximum flow rate 25L/min
- 5 second watering delay: to ensure optimum valve functionality, there is a delay between a **ZONE** stopping and another commencing watering

Overview

Compact Wi-Fi Hub Components

- a. Provisioning button
- b. Power LED indicator
- c. Status LED indicator
- d. USB-C Port
- e. Collapsible antenna
- f. 1.5m USB-A to USB-C Cable

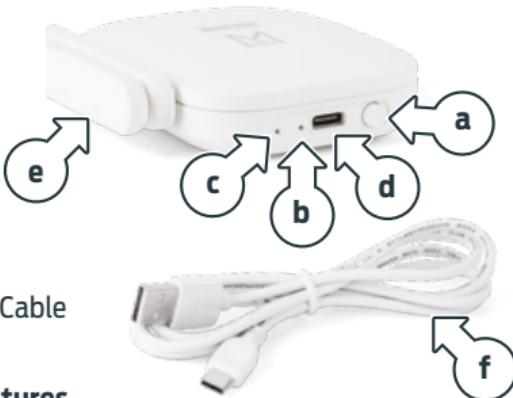

Compact Wi-Fi Hub Features

- Pair up to 4× additional **HOLMAN WX Tap Timers**, including 1× **Smart Water Sensor** for each outlet added
- 917MHz RF communication between Wi-Fi Hub and **WX4 Tap Timer** – 60m line-of-sight range
- 2.4GHz Wi-Fi connection only
- For indoor use only, and must be within Wi-Fi network range

Overview

WX4 Tap Timer LED Status

LED PATTERN	MEANING
Red/Blue: Alternate flash 5 times	Start up pattern (recognition of batteries/power)
Blue: Fast flash	Ready for pairing
Blue: Slow flash	Watering
Red: Slow flash	Error / leak detected
Red: Flash 0.2 seconds on, 3 seconds off	Low battery warning
Red: Flash 0.2 seconds on, 4 seconds off	Flat battery warning
Red: Flash 0.5 seconds on, 15 seconds off	Detected water leakage flow exceeds 1L – leakage alarm activated
Red: Flash (3 times)	Factory reset


Compact Wi-Fi Hub LED Status

LED PATTERN	MEANING
Power LED: BLUE SOLID	Wi-Fi Hub is on
Status LED: BLUE FAST FLASH	Ready for pairing – normal
Status LED: BLUE SLOW FLASH	Wi-Fi Hub is ready for pairing with Wi-Fi
Status LED: OFF	Normal operation

Installation

Mounting the WX4 Tap Timer


1. Use machine screws M3×10mm to fix plastic brace [a] to your Tap Timer
2. Secure support bracket to plastic brace using machine screw M4×20mm through the hole [b], secure with fixings
5. Drill into wall and hammer in wall plugs
- ⚠ Ensure the area is clear of any hazards (power water etc.) behind the wall before drilling
6. Attach the metal arm with 4× machine screws M4× 40mm [d]

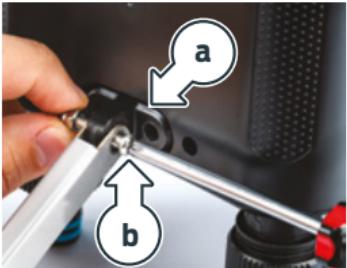

3. Install the **WX4 Tap Timer** on the tap
4. Mark inside bracket holes to prepare for drilling [c]



ⓘ Alternatively, the unit can be mounted directly onto the water pipe [e] and secured using a cable tie [f]

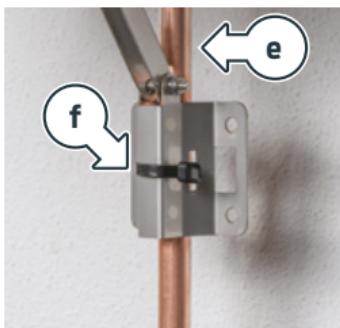

Setup

Installing Holman Home

1. Download **Holman Home** to your mobile device via the [App Store](#) or [Google Play](#)
2. Open **Holman Home** on your mobile device
3. Tap **SIGN UP**
4. Read our User Agreement and Privacy Policy and tap **AGREE** if you wish to proceed
5. Follow the prompts to register a **Holman Home** account with your email address

⚠ Ensure your country details are correct at this stage

ℹ You may be prompted to allow notifications—the app can still function if you choose to opt out

ℹ You may be prompted to allow access your location. This allows the app to show weather information—it will still function if you choose to opt out



Connect your garden with
HOLMAN HOME
Wi-Fi connection and automation



Control your garden from anywhere in the world, day or night, with Holman Home Wi-Fi control. Enjoy complete control of your irrigation and garden lighting, wherever internet access is available.

Setup

Pair Wi-Fi Hub Using AP Mode

1. Power on Wi-Fi Hub near your 2.4GHz Wi-Fi router with internet access
2. Ensure Wi-Fi Hub is in AP pairing mode by holding the provisioning button [a] down for 10 seconds

i If the status light is flashing fast, hold button down for a further 10 seconds

⚠ Paring will expire in all cases after 2 minutes




3. Open your device Wi-Fi settings, and search for the network named SmartLife-xxxx
4. Connect to this network (no password is required)

5. Open **Holman Home** and add a new device by tapping **+** [b] on the **HOME** screen



6. The Wi-Fi Hub will be detected under **DISCOVERING DEVICES** [c]


7. Click **ADD** [d]

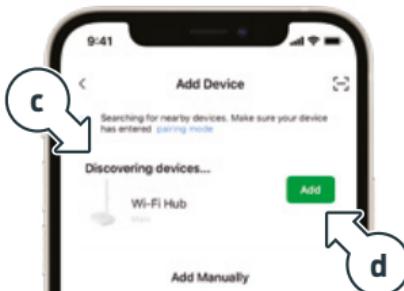

Setup

Pair Wi-Fi Hub Using AP Mode (continued)

8. Enter the SSID [e] and password for your router
9. Press **NEXT** [f]

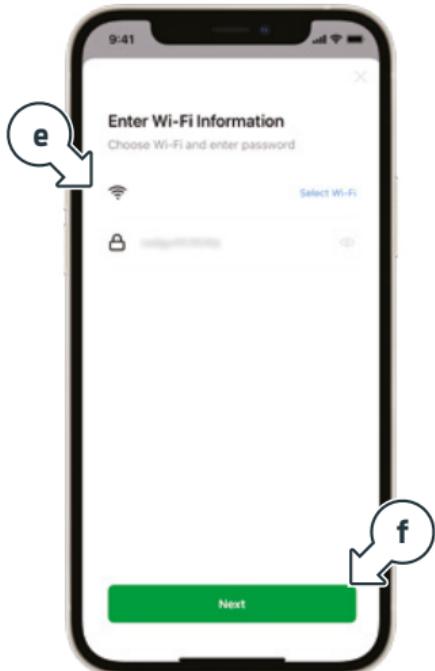

10. Wait for the pairing process to complete
11. Optionally name your device by tapping **EDIT** [g], then click done [h]




Setup

Add the Wi-Fi Hub to Holman Home

1. Power on Wi-Fi Hub near your 2.4GHz Wi-Fi router with internet access
2. Ensure Wi-Fi Hub is in pairing mode by holding the provisioning button down for 10 seconds
3. Open **Holman Home** and add a new device by tapping **+** [a] on the **HOME** screen
4. The Wi-Fi Hub will be detected under **DISCOVERING DEVICES** [b]
5. Click **ADD** [c]

i If the status light is flashing fast, hold button down for a further 10 seconds


⚠ Paring will expire in all cases after 2 minutes

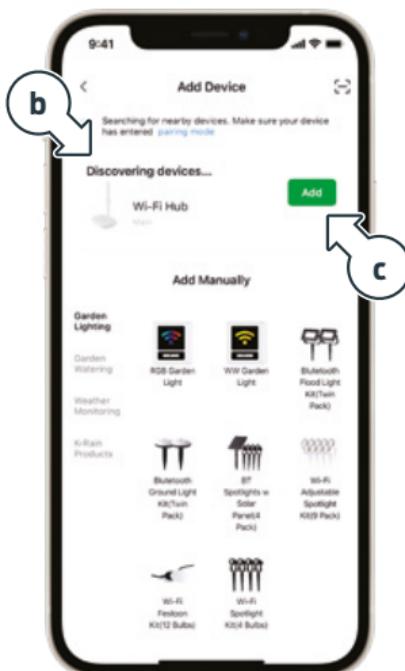

Setup

Add the Wi-Fi Hub to Holman Home (continued)

6. Enter the SSID [d] and password for your router
7. Press **NEXT** [e], wait for the pairing process to complete
8. Optionally name your device by tapping  [f], then click **done** [g]

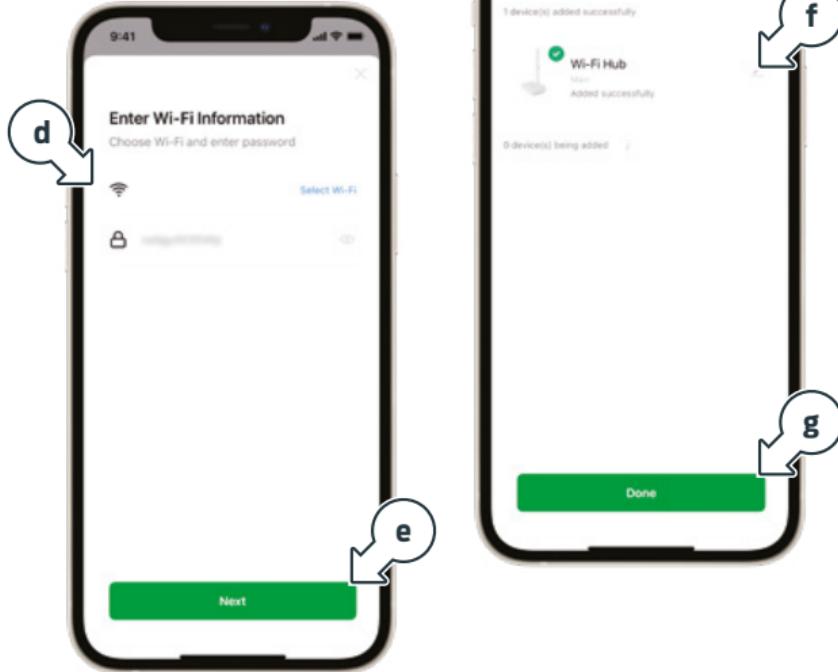


Setup

Add the WX4 to Holman Home

1. Install 4x 1.5v AA alkaline batteries into battery compartment [a], contacts [b] pointing towards the front of the tap timer



2. In the **Holman Home** screen, tap the **Wi-Fi Hub** added in the installation steps above [c]

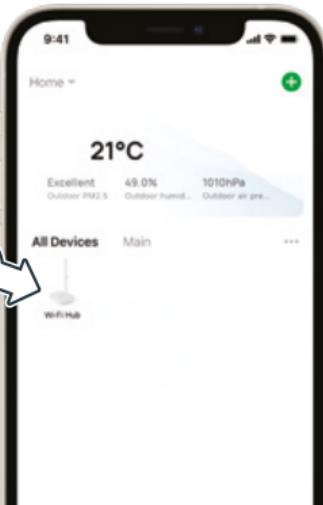

3. Ensure the **WX4** is in pairing mode by selecting **RUN** [d] on the dial, and holding the **START/STOP** button [e] for 10 seconds. The **STATUS LIGHT** [f] will flash blue




4. In the **Holman Home** app, select **+ADD MORE DEVICES** [g]




Setup

Add the WX4 to Holman Home (continued)

5. Confirm LED is blinking [h]

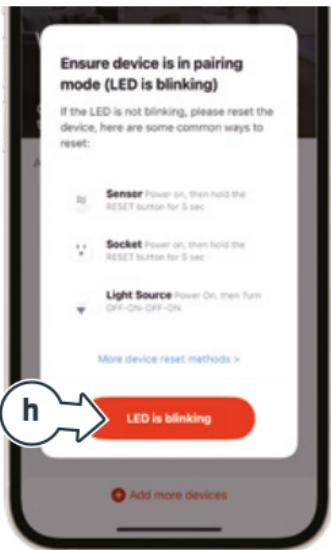

h

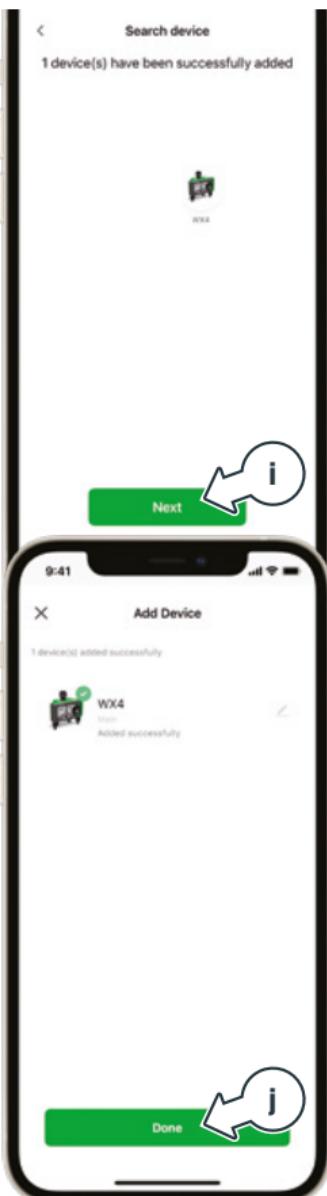

6. The **Wi-Fi Hub** will search for the **WX4**. When the device has been successfully added, tap **NEXT [i]**
7. Optionally name the device and click **DONE [j]**

Operation

WX4 Tap Timer Status


1. Tap **WX4 TAP TIMER** [a] on the **HOME** screen devices list



- i This displays **WX4 Tap Timer** controls and settings
- i By default, **Holman Home** will display the data and controls for **ZONE 1**

2. Tap any **ZONE** [b] to switch between zones on each screen

- i Custom names can be applied to each zone by tapping **pen** [c] next to the desired zone
- 3. **LAST WATER USAGE** [d] uses built-in flow meters within your **WX4 Tap Timer**
- 4. For additional information about your **WX4 Tap Timer**, tap **pen** [e] in the top right hand corner

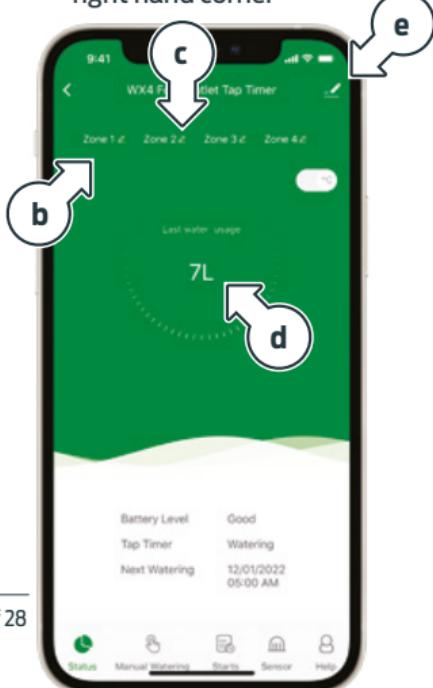

Operation


WX4 Tap Timer Manual Controls

i **MANUAL WATERING**

is for one-off
watering durations

1. Within the **WX4 Tap Timer** controls, tap **MANUAL WATERING** [a] to access manual watering controls
2. Tap any **ZONE** [b] to select as desired
3. Move the hollow green circle [c] on the dial to set the desired watering duration
4. Press ► [d] to start watering and ■ to stop


i Manual watering can also be stopped or started for any zone by adjusting the Main Dial on your **WX4 Tap Timer**

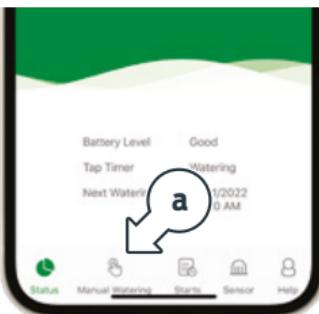


Operation

WX4 Tap Timer Scheduling

1. Within the **WX4 Tap Timer** controls, tap **STARTS** [a]

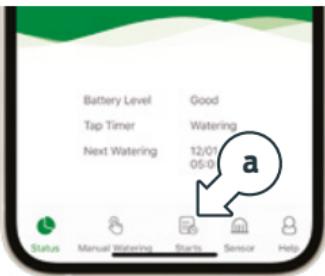

1. This displays the **STARTS** screen for watering schedules
2. Tap **START A** [b] to set one of three schedules as desired

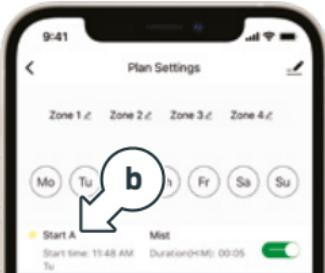

1. This reveals **START SETTINGS** in **WATER** [c] mode by default


3. Toggle between 24hr and AM/PM time with the **24 HOUR TIME** switch [d]
4. Tap **START TIME** [e] to open the clock and set a start time
5. Tap **RUN TIME** [f] to open the timer and set a watering duration
6. Tap each of the days [g] as required to toggle watering days on or off
7. Tap **SAVE** [h] to set the desired schedule or < [i] to return without saving



Operation

WX4 Tap Timer Scheduling (continued)

8. Within **START SETTINGS**, tap **MIST [j]** for shorter burst intervals
9. Use **MISTING PERIOD [k]** to set the overall duration of the misting program
10. Use **MIST TIME [l]** to set the duration for each burst of misting
11. Use **INTERVAL [m]** to set the amount of time between each burst
12. Tap **SAVE [n]** to set the desired schedule and return to the **STARTS** screen, or tap **< [o]** to return without saving

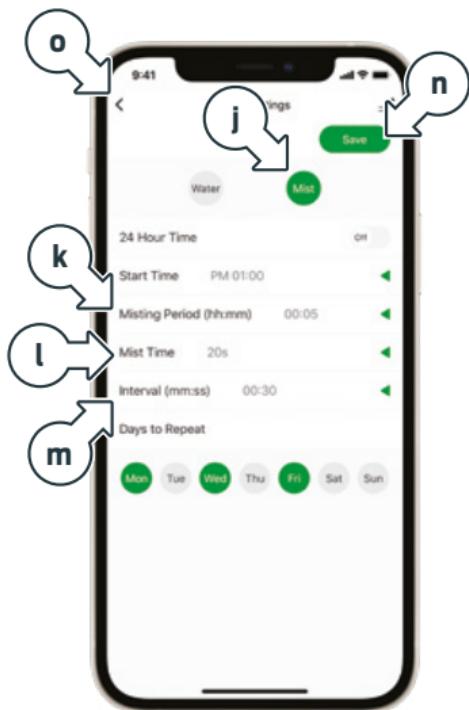

Operation

WX4 Tap Timer Scheduling (continued)

13. Set additional **STARTS** for **B** and **C** [p] as desired
14. As **START SETTINGS** are saved, scheduled times will show on each **START**
15. Watering days are indicated at the top of the screen [q]
16. To manually toggle each **START** switch [r] on or off as desired
17. Suspend watering by tapping **24H**, **48H** or **72H** under **RAIN DELAY** [s] as desired

● For additional data from a **Smart Moisture Sensor** (SKU: WXMS) tap **SENSOR** [t]


● For additional support, tap **HELP** [u] or visit support.holmanindustries.com.au



Additional Notes

Low Battery Notification

- If the batteries need to be replaced, a notification will display [a] in **Holman Home** in the device list—if the **WX4 Tap Timer** interface is opened, this will be dismissed
- To review the notification:
 - i. Tap **ME** below the **Holman Home** device list [b]
 - ii. Tap **MESSAGE CENTRE** [c] and your **Holman Home** notifications will display as shown [d]
- To display these as notifications on your smartphone, ensure notification permissions are enabled for **Holman Home** in your smartphone system settings

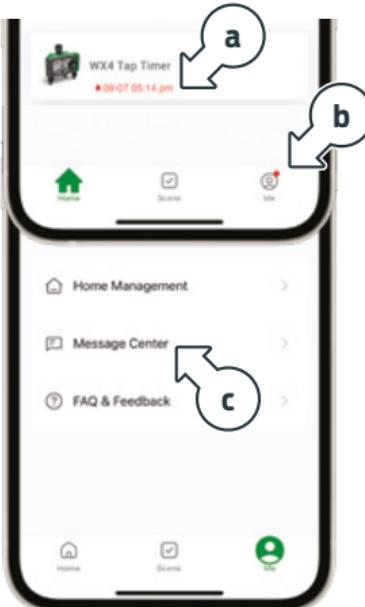

Compatibility

Smart Moisture Sensor [WXMS]



- Connects your tap timer directly to the **WXMS Smart Moisture Sensor** through **Holman Home**
- **WXMS Smart Moisture Sensor** sends soil moisture and temperature data to **WX4 Tap Timer**
- Reduce water usage with 5× levels of adjustable moisture sensitivity

⚠ Your **WX4 Four Outlet Tap Timer** is not compatible with the **WX1TH** or **WX2TH Wi-Fi Hub and Socket**

i For additional support with **WX4 Tap Timer** compatibility, please visit support.holmanindustries.com.au

Maintenance

Cold Weather

- Your **WX4 Tap Timer** should be removed from the tap and stored away during winter
- ⚠ Keep your tap timer out of freezing conditions as this can damage internal components

Batteries

- Remove batteries from your **WX4 Tap Timer** during periods of non-use
- ⚠ Battery leakage can cause corrosion and damage to your **WX4 Tap Timer**

Connection Issues

- If your **WX4 Tap Timer** shows as disconnected after replacing the batteries, please wait a few minutes for **Holman Home** to update your device status
- For additional support with connection issues, please visit support.holmanindustries.com.au

Warranty

2 Year Replacement Guarantee

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In addition to the rights and remedies you have under laws relating to your Holman product, we also provide you with a Holman warranty.

Holman warrants this product against defects caused by faulty workmanship and materials for 2 years from the date of purchase. During this warranty period Holman will replace any defective product.

In the event of a product being replaced during the warranty period, the warranty on the replacement product will expire 2 years from the purchase date of the original product, not 2 years from the date of replacement.

To the extent permitted by law and without limiting the consumer guarantee, this Holman Replacement Warranty only covers products that have been put to domestic use, and excludes liability for consequential loss or any other loss or damage caused to property of persons arising

from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some advice, visit Holman Industries website :

support.holmanindustries.com.au

If you consider that this warranty covers your defective product, present your defective product and your receipt as proof of purchase to the place of purchase, where the retailer will replace the product for you on our behalf.



**Thanks for being a
#SMARTGARDENER**



**We really appreciate having you as a customer, and
would like to say thank you for choosing us.**

We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an extended warranty. Keep up to date with relevant product information and special offers available through our newsletter.

www.holmanindustries.com.au/product-registration/



HOLMAN

For the #SMARTGARDENER   