

HOLMAN



Alto Wi-Fi Weather Station Instruction Manual

SKU WS5093W
IS1212 REV B

Customer Service

support.holmanindustries.com.au
www.holmanindustries.com.au



**Reliance Worldwide
Corporation (Aust.) Pty. Ltd.**

27-28 Chapman Place
Eagle Farm, QLD, Australia 4009

Please be sure to read through all the instructions before attempting to use your product.

Apple, the Apple logo, iPhone, and iPad are trademarks of Apple Inc., registered in the U.S. and other countries and regions. App Store is a service mark of Apple Inc. Google Play and the Google Play logo are trademarks of Google LLC. All other content is Copyright © Reliance Worldwide Corporation (Aust.) Pty. Ltd. 2026.

Contents

Precautions	5
Overview	6
Tech Specs	6
Package Contents	7
Indoor Display Panel	8
Outdoor Sensor	10
Installation and Setup	11
Setup Summary	11
STEP i: Outdoor Sensor Setup	11
STEP ii: Indoor Display Panel Setup and Connection	12
STEP iii: Connecting to Holman Home	12
STEP iv: Position Your Sensors	15
STEP v: Mounting the Outdoor Sensor	15
Operation	16
Manual Time Setup	16
Manual Alarm Setup	16
Snooze Function	16
Temperature Units	17
Max/Min for Temperature and Humidity	17
Manual Temperature Alert Setup	17
Temperature Alert On/Off	17
Local Weather Forecast	17
Freezing Conditions	17
Adjusting the Barometric Pressure Reading	18
Wind Speed and Direction	18
Rainfall	18
Feels Like/Dew Point/Wind Chill/Heat Index	18
Illumination	18
RF Connection to Outdoor Sensor	18
Wi-Fi Signal	18
Maintenance	19
Low Batteries	19
Outdoor Sensor Checks	19
Rainfall Sensor Access	19
Hygro-Thermo Sensor Access	20
Warranty	21
Troubleshooting	22

Precautions

- Read through these instructions in their entirety before attempting to setup up your **Alto Wi-Fi Weather Station**
- Do not subject the unit to excessive force, shock, dust, temperature or humidity
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.
- Do not immerse components in water
- If you spill liquid over any indoor components, dry immediately with a clean, soft, and lint-free cloth
- Do not clean the unit with abrasive or corrosive materials
- Do not tamper with the units internal components to avoid invalidating your warranty
- Placement of this product on certain types of wood may result in damage to its finishing for which Holman Industries will not be responsible
- Only use fresh non-rechargeable alkaline batteries. Do not mix new and old batteries
- Risk of explosion if the battery is replaced by an incorrect type
- Disposal of a batteries into fire or a hot oven, or mechanically crushing or cutting of batteries can result in an explosion
- Leaving batteries in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas
- Batteries subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas
- Only use genuine **HOLMAN** attachments or accessories available at holmanindustries.com.au to ensure your warranty stays valid
- Dispose of used batteries according your local recycling regulations
- Ensure your **Indoor Display Panel** is installed near your power outlet and is easily accessible
- Technical specifications and user manual contents for this product are subject to change without notice. We advise checking holmanindustries.com.au for the latest information
- This product is not a toy. Keep out of the reach of children
- The **Indoor Display Panel** is intended to be used only indoors
- Only use the supplied power adaptor to power your **Indoor Display Panel**

Risk of explosion if battery is replaced by an incorrect type

The manufacturer and supplier cannot accept any responsibility for any incorrect readings, export data lost and any consequences that occur should an inaccurate reading take place. Any app images are subject to software updates and may differ from what is shown on the latest version of Holman Home. This product is designed for use in the home only as indication of weather conditions. This product is not to be used for medical purposes or for public information. iOS is a trademark of Apple Inc. Android is a trademark of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.



Overview

Tech Specs

Indoor Display Panel

- Dimensions (W × H × D): 156 × 114 × 31mm
- Weight: 250g
- Input Power: 5.0V, 1.2A adaptor
- Backup Battery: 2× AA, LR6, 1.5V (not included)
- Wi-Fi Standard: 802.11 b/g/n
- Wi-Fi Operating Frequency: 2.4GHz
- Supported Router Security Type: WPA/WPA2, OPEN, WEP
- Backlight: White LED
- Low Battery Indicator: Indoor/Outdoor
- Hour Format: 12hr am/pm or 24 hr
- Continuous perpetual calendar up to 2099
- Date Display: Day, Month and Day of Week
- Dual alarm with snooze function (5 minutes alarm interruption)
- Barometer Range: 850–1050hpa (accuracy +/-5hpa)
- Weather Forecast: Sunny, Partly Sunny, Cloudy, Rainy, Storm
- Temperature Units: °C and °F
- Indoor/outdoor temperature and humidity with trend
- Daily max./min. of temperature (resets at 9am) and humidity
- Indoor Temperature Range: -10°C to +50°C (accuracy +/-1°C)
- Outdoor Temperature Range: -40°C to 70°C (accuracy +/-1°C)
- Humidity Range: 20–95% (accuracy +/-5%)
- Temperature alert for indoor and outdoor
- Wind Speed Units: mph/kmh
- Wind Speed Range: 0–215kmh (accuracy +/- 10%)
- Wind Direction Display Mode: 16 directions
- Rainfall Units: mm and in
- Rainfall Display Mode: TODAY (resets at 9am), YESTERDAY and TOTAL
- Rainfall Range: 0–999.99mm
 - Accuracy <15mm: +/-10%,
 - Accuracy 15mm to 999.9mm: +/-7%
- Graphic history for Barometer
- Weather Index Modes:
 - Feels Like Range: -65~50°C
 - Dew Point Range: -20~60°C
 - Wind Chill Range: -65~18°C
 - Heat Index Range: 26~60°C
- Out of the Display Range, will show LL or HH

Outdoor Sensor

- Dimensions (W × H × D): 305 × 192 × 135mm
- Weight: 530g
- Connection Frequency: 917MHz
- Connection range: 100m line-of-sight*
- Batteries: 3×AA, LR6, 1.5V (not included)

* Actual distance may vary based on environment, the distance will be shortened with interference such as concrete, etc.

Overview


Package Contents



1. Outdoor Sensor
2. Indoor Display Panel
3. Power cable for Display Panel
4. Stainless Steel Mounting Pole (fasteners included)

Overview


Indoor Display Panel

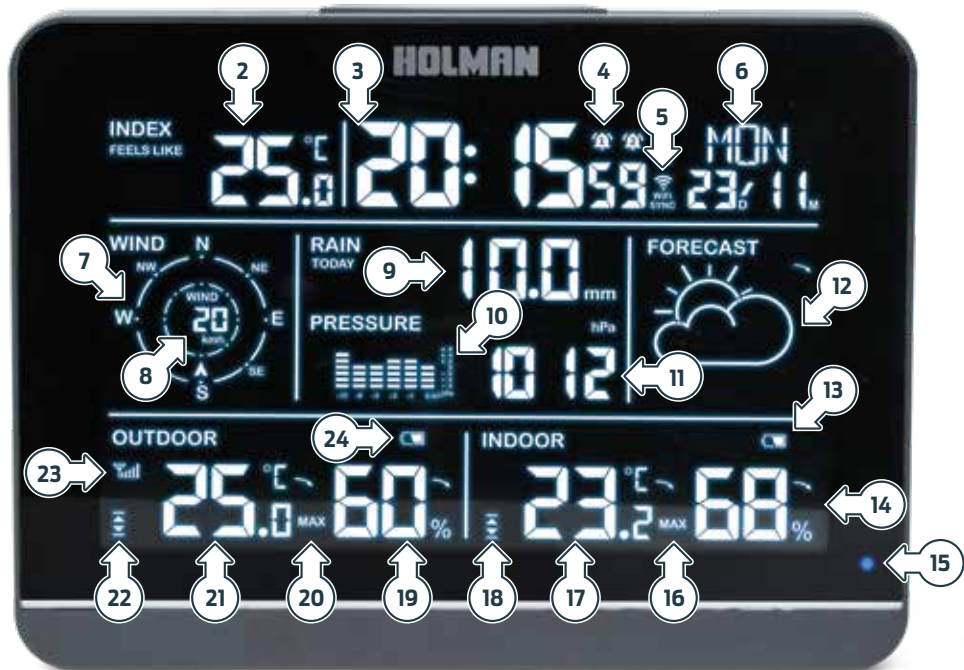

Overview

Indoor Display Panel

1. **SNOOZE/LIGHT**
2. Index
3. Time
4. Alarm Indicators
5. Wi-Fi Indicator
6. Day/Date/Month
7. Wind Direction
8. Wind Speed
9. Rain
10. Barometric Graphic History
11. Air pressure
12. Forecast Indicator with Trend
13. Indoor Battery Indicator
— Indicators hidden when battery level is good
14. Indoor Humidity with Trend
15. Wi-Fi LED
16. Indoor Max/Min
17. Indoor Temperature with Trend
18. Indoor Alerts
19. Outdoor Humidity with Trend
20. Outdoor Max/Min
21. Outdoor Temperature with Trend
22. Outdoor Alerts
23. RF Indicator
24. Outdoor Battery Indicator
— Indicators hidden when battery level is good
25. AC Jack (on side)
26. **SET**
27. ▲
28. ▼
29. **ALARM**
30. **RAINFALL**
31. **WIFI**
32. **SEARCH**
33. Mounting Hanger
34. Battery Cover
35. Table Stand

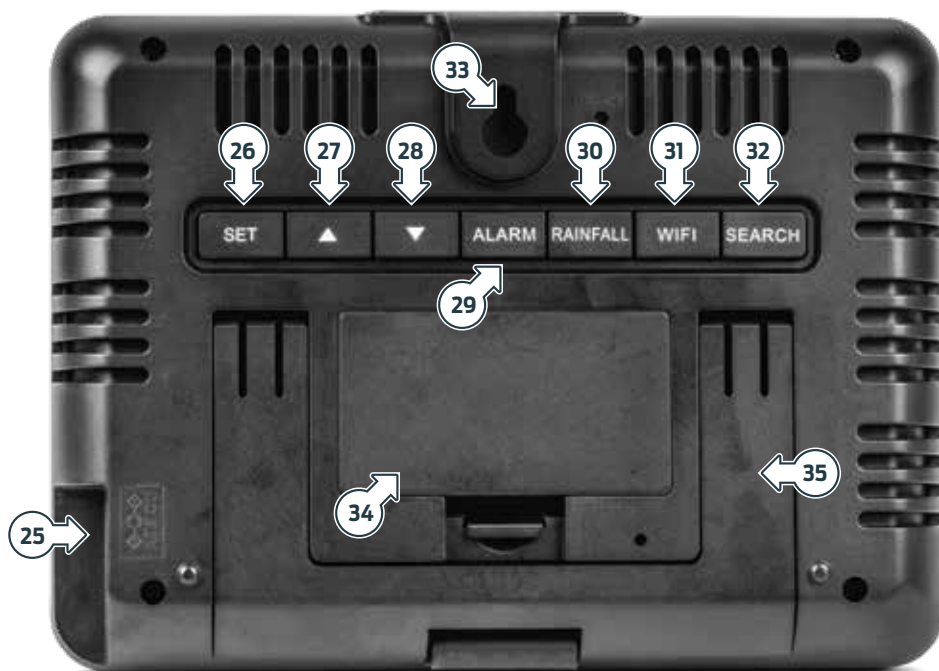

Overview

Outdoor Sensor

1. Wind Speed
2. Balance Indicator
3. Rain Gauge
4. Solar Panel

5. Battery Cover
6. Wind Direction
7. RF LED light
8. **RESET**

- Rainfall sensor (3) can be removed periodically for cleaning purposes
- Do not carry outdoor sensor by the wind vane or wind speed sensors



Installation and Setup

Setup Summary

- The following summary outlines the key setup steps for your **Alto Wi-Fi Weather Station**
- Refer to the following sections in this manual for more details on each setup step
 - STEP i:** Set up the **Outdoor Sensor** by installing batteries
 - STEP ii:** Set up your **Indoor Display Panel** and connect to your **Outdoor Sensor**
 - STEP iii:** Connect your **WEATHER STATION** to **HOLMAN HOME**
 - STEP iv:** Mount your **Outdoor Sensor**
 - STEP v:** Manual Time Setup (if not connecting to Wi-Fi) and Configure Unit Settings (also available on the app)

STEP i: Outdoor Sensor Setup

- Use 3 x AA size, 1.5V Alkaline batteries (not included)

Installing the batteries

1. Unscrew the battery cover (a) and insert AA batteries with the correct + and - polarity



2. Observe the red LED light near the Hygro-Thermo sensor (b)



- This will flash every minute when transmitting RF signal to the **Indoor Display Panel**
- 3. Close the battery cover and replace the screws
- Batteries will require replacing periodically, low battery level is indicated on the **Indoor Display Panel** and app

Installation and Setup

STEP ii: Indoor Display Panel Setup and Connection

1. Open the battery cover located at the back of the **Indoor Display Panel** and insert **AA** batteries (a) at the correct **+** and **-** polarity



- These batteries protect data in the case of a power outage
 - The LCD on the **Indoor Display Panel** will activate and then return blank—press **SNOOZE/LIGHT** to reactivate
2. The **RF CONNECTION INDICATOR**  will flash for 3 minutes once battery power is established to enable connection to your outdoor sensor
- Ensure the **Outdoor Sensor** is powered within this time frame for easy connection
 - 3. Connect the **Indoor Display Panel** to mains power using the supplied 5.0V, 1.2A adaptor
 - The LCD on the **Indoor Display Panel** will activate
 - The **RF CONNECTION INDICATOR**  will be stable when RF connection has succeeded
 - Once RF connection is successful, outdoor temperature and humidity readings should be available
 - In case of connection failure, hold **SEARCH** at the top of the **Indoor Display Panel** for 5 seconds to try again
- ⚠ Without AC power, the **Indoor Display Panel** will become inaccessible by Wi-Fi and **Holman Home**
- ⚠ When the batteries are replaced without AC power, the **Indoor Display Panel** will lose all weather data and settings, and will need to be resynchronised to the **Outdoor Sensor**

STEP iii: Connecting to Holman Home

1. Download **Holman Home** to your mobile device via the **App Store** or **Google Play**

- ⚠ All app processes may change with software and OS updates on your device
- Visit our website for up-to-date details holmanindustries.com.au/holman-home
2. Open **Holman Home** on your mobile device
 3. You may be prompted to allow notifications—the app can still function if you choose to opt out
 4. Tap **SIGN UP**
 5. Read our User Agreement and Privacy Policy and tap **AGREE** if you wish to proceed
 6. Follow the prompts to register a **Holman Home** account with your email address

- ⚠ Ensure your country details are correct at this stage
- ⚠ You may be prompted to allow access your location. This is required for your **Weather Station** to work correctly
- We recommend having Bluetooth® active on your device before proceeding



For more features, like **SMART AUTOMATIONS**, check out holmanindustries.com.au/holman-home or scan this QR code!

Installation and Setup


STEP iii: Connecting to Holman Home (continued)

Adding your Weather Station to Holman Home


1. Access the **HOME** screen for **Holman Home** as shown
2. Ensure the Wi-Fi indicator LED on the **Indoor Display Panel** (bottom right) is flashing red
 - If this LED is not flashing, press and hold **WIFI** on the top of the **Indoor Display Panel** until the front LED starts flashing red
3. Tap + (a) or **ADD DEVICE** (b)
4. Follow the prompts within **Holman Home** to work through the Wi-Fi connection setup

Accessing Weather Data

1. Once linked to **Holman Home**, you can tap the **Alto** icon (c) on the **HOME** screen

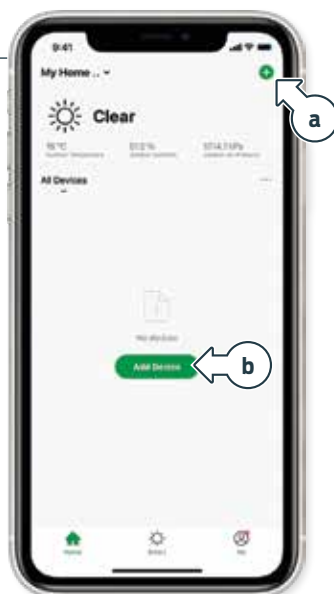

2. Tap to open the **TODAY** screen for your **Alto Weather Station**
3. This screen displays the following information:
 - d. Your **Weather Station** name, which can be changed by tapping ⚙️
 - e. Your **Weather Station** location
 - f. Live sensor data from your **Outdoor Sensor** and **Indoor Display Panel**
 - g. Additional weather data

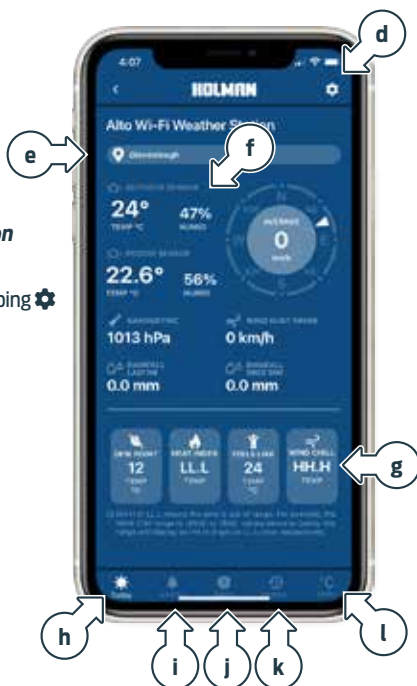

- You may need to scroll down to access the additional weather information
4. For additional weather controls, use the navigation menu at the bottom to access:
 - h. **TODAY** screen for your Alto Weather Station
 - i. **ALARMS** for time alarms
 - j. **ALERTS** for temperature based alerts
 - k. **HISTORY** for historical weather data based on your sensor readings
 - l. **UNITS** to set measurement units for your weather data readings

Installation and Setup

STEP iii: Connecting to Holman Home (continued)

Setting Time Alarms

1. From the **TODAY** screen, tap **ALARMS** (i) in the bottom navigation bar



2. Tap one of the existing alarms (m) to access their settings
3. Toggle the alarm time as desired (n) and tap **SAVE** (o) to confirm



- Active alarms are indicated with 1 and/or 2 next to the time on the **Indoor Display Panel**
- Alarms will sound from the **Indoor Display Panel** for 2 minutes unless a button is pressed
- When an alarm sounds, press **SNOOZE/LIGHT** to snooze the alarm for 5 minutes
- Snooze can be disabled by pressing any other button on the **Display Panel**

Setting Weather Alerts

1. From the **TODAY** screen, tap **ALERTS** (j) in the bottom navigation bar



2. Tap **INDOOR** (p) or **OUTDOOR** (q) as desired to set the alert conditions
- This will open alert settings to set the maximum and minimum temperature alerts



3. Once you have set the desired alert settings (r), tap **SAVE** (s) to confirm
- When a maximum or minimum temperature has been reached, the **Indoor Display Panel** will sound 5 beeps every minute until the temperature either drops or rises back within the range of the alert settings
- The **Indoor Display Panel** will flash or against the relevant temperature reading

Installation and Setup

STEP iv: Position Your Sensors

- When positioning both the inside and outside units, remember they are subject to interference
- Install both units as close as possible to each other
- Avoid outside interference by not placing them near computers, TVs, antennae, etc.
- Concrete walls and floors can interrupt transmissions. Avoid these as much as possible
- If the connection is successful initially and fails occasionally, try to reduce the distance between the **Outdoor Sensor** and the **Indoor Display Panel**
- Avoid trees and other obstacles where rainfall or wind speed may affect accurate reading

STEP v: Mounting the Outdoor Sensor

1. For accurate reading, the metal pole for the **Outdoor Sensor** should be securely mounted on a horizontal surface, at least 1 meter above the ground, and in an open area
 2. To ensure your **Outdoor Sensor** points in the correct direction, use a compass to establish North
 3. Hold the direction vane in line as shown (t) and wait for one minute
 4. Review **Holman Home** or the **Indoor Display Panel** and the wind direction should report as North
- If the vane does not report exactly North, adjust the **Outdoor Sensor** angle accordingly
5. Ensure the **BALANCE SPIRIT LEVEL** (u) is centred before finalising mounting



Operation

Manual Time Setup

- Time may also be set automatically by the **Holman Home** app
- 1. Press and hold **SET** for 3 seconds
- 2. 12/24 hour indicator will flash. Use ▲ and ▼ to select
- 3. Press **SET** to confirm
- 4. The display for the year will flash. Use ▲ and ▼ to select the year
- 5. Press **SET** to confirm
- 6. The display for the month will flash. Use ▲ and ▼ to select the month
- 7. Press **SET** to confirm
- 8. The display for the date will flash. Use ▲ and ▼ to select the date
- 9. Press **SET** to confirm
- 10. The display for the hour will flash. Use ▲ and ▼ to select the hour
- 11. Press **SET** to confirm
- 12. The display for the minutes will flash. Use ▲ and ▼ to select the minutes
- 13. Press **SET** to confirm
- 14. The unit for air pressure hpa will flash. Use ▲ and ▼ to select hpa/InHg
- 15. Press **SET** to confirm
- 16. The unit for wind speed kmh will flash. Use ▲ and ▼ to select kmh/mpH
- 17. Press **SET** to confirm
- 18. The unit for rainfall in mm will flash. Use ▲ and ▼ to select mm/inch
- The clock automatically changes from set-up mode to time display mode if no keys are pressed for 20 seconds

Manual Alarm Setup

- Alarms can also be set in the **Holman Home** app
- 1. Press **SET** to switch from time display **A1**
- 2. Press and hold **SET** for 3 seconds; the flashing alarm time will show
- 3. The hour display of the alarm time will flash. Use ▲ and ▼ to select the hour
- 4. Press **SET** to confirm
- 5. The minutes display of the alarm time will flash. Use ▲ and ▼ to select the minutes
- 6. Press **SET** to confirm
- 7. Repeat the above instructions again for **A2**
- Once the alarms are set up, press **ALARM** to activate/deactivate **A1** or **A2**
- The alarm sounds for 2 minutes if no key is pressed to stop it

Snooze Function

- Press **SNOOZE/LIGHT** while the alarm sounds to activate the snooze function
- If the snooze function is activated, the alarm symbol will flash
- The alarm will repeat after 5 minutes
- The snooze function can be stopped by pressing any key except **SNOOZE/LIGHT**

Operation

Temperature Units

- The temperature display can be in °C or °F by pressing ▼

Max/Min for Temperature and Humidity

- Press ▲ for indoor/outdoor max/min of temperature and humidity
- Hold ▲ for more than 3 seconds to clear the max/min record daily

Manual Temperature Alert Setup

- Temperature alerts can also be set in the **Holman Home** app
- 1. Press **SET** from TIME → **A1** → **A2** → ALERT setting
- 2. The upper limit alert symbol of outdoor temperature will flash. Hold **SET** for 3 seconds
- 3. The alert symbol and temperature will flash together. Use ▲ and ▼ to set the maximum alert temperature
- 4. Press **SET** to confirm
- 5. The alert symbol will keep flashing. Press **SET**
- 6. Outdoor temperature ▼ will flash. Hold **SET** for 3 seconds
- 7. The temperature and ▼ will flash together. Use ▲ and ▼ to set the minimum alert temperature
- 8. Press **SET** to confirm
- 9. Repeat the above process for indoor temperature
- 10. When the alert is activated, the alert symbols ▲ and ▼ stay visible next to their respective temperatures

Temperature Alert On/Off

1. Hold **ALARM**
 2. Both outdoor ▲ and ▼ will flash. Press ▲ or ▼ to turn alerts on or off
 3. ▲ flashing and ▼ solid means the alert is on
- Alert on: alert symbols ▲ and ▼ stay visible next to their respective temperatures when the display returns to its default mode
 - Alert off: relative alert symbols ▲ and ▼ will not be visible when the display returns to its default mode
 - The set-up process cannot be completed if the maximum temperature selected is lower than the minimum selected temperature
 - The minimum temperature selected must at least be 1°C below the maximum selected temperature

Local Weather Forecast

- Local weather forecast is generated from air pressure only, resulting in discrepancies with the actual weather from time to time

-  Sunny
-  Slightly sunny
-  Cloudy
-  Rain
-  Storm

Freezing Conditions

- The freeze icon ❄ will flash during outdoor temperatures from -1°C to 1°C
- The freeze icon ❄ will display permanently during outdoor temperatures below -1.1°C

Operation

Adjusting the Barometric Pressure Reading

- Barometric pressure has been pre-configured to the average altitude in Australia
- 1. Hold **SNOOZE/LIGHT** for three seconds
- 2. The current air pressure offset will flash; use ▲ and ▼ to adjust accordingly
- 3. Press **SNOOZE/LIGHT** to confirm
- 4. The **FORECAST** icon for the selected rating will now flash; use ▲ and ▼ to cycle through the five forecast options
- 5. When the desired **FORECAST** icon is showing, press **SNOOZE/LIGHT** to confirm
- Your *Indoor Display Panel* will now be in back in the default *Time Display* mode

Wind Speed and Direction

- The wind speed can be shown in mph and kmh which can be changed in the *Holman Home* app
- The display of the speed is updated each minute
- Wind direction can be shown in one of 16 directions, which is updated each minute

Rainfall

- Rainfall can be shown in mm and in, which can be changed in the *Holman Home* app
- Press **RAINFALL** to cycle through TODAY / YESTERDAY / TOTAL rainfall
- Press **RAINFALL** for more than 3 seconds to clear the volume accordingly. ie. If showing TODAY, only clear today's record, if showing YESTERDAY, only clear yesterday's record, etc.
- The maximum of the rainfall is up to 999.99mm. The display will flash in the case of a maximum reading. In this case, data will need to be cleared manually (as above), to continue measuring rainfall

Feels Like/Dew Point/Wind Chill/Heat Index

- Press **SEARCH** to cycle through FEELS LIKE / DEW POINT / HEAT INDEX / WIND CHILL

Illumination

- Press the **SNOOZE/LIGHT** to switch the display backlight
- The default light is always on in AC power mode, with default off in battery power mode

RF Connection to Outdoor Sensor

- Hold the key **SEARCH** for 3 seconds. The RF signal  will flash for synchronisation
- RF reception is weaker in rooms with concrete walls (e.g. in the basement) and in office buildings, the distance will be shortened if there is interference. For extreme cases, please put the *Indoor Display Panel* near a window

Wi-Fi Signal

-  Strong
-  Good
-  Moderate
-  Weak
- If no Wi-Fi symbol is visible on the *Indoor Display Panel*, then Wi-Fi connection has failed
- Hold the **WIFI** button until the Wi-Fi symbol flashes to reset the Wi-Fi connection

Maintenance

Low Batteries

Indoor Display Panel:

- The batteries in your **Indoor Display Panel** protect the settings and data in the case of a power outage
- Be sure to use quality non-rechargeable alkaline batteries
- The **Indoor Display Panel** will highlight its own low battery with  in the **INDOOR** section of the display
- **Holman Home** will indicate the **Indoor Display Panel** battery status with the following:
 -  Low battery

Outdoor Sensor:

- The **Indoor Display Panel** will highlight the status of the **Outdoor Sensor** batteries with  in the **OUTDOOR** section of the display
- **Holman Home** will indicate the **Outdoor Sensor** battery status with the following:
 -  Low battery
- If this battery is indicated as low, it will need to have new batteries installed
- Follow the **Outdoor Sensor** setup instructions to change the batteries
- You may also need to follow the **Indoor Display Panel Setup and Connection** instructions to re-establish a connection between your Display Panel and Outdoor Sensor after the batteries have been replaced

Outdoor Sensor Checks

- We highly recommend checking the rainfall and Hygro-Thermo sensors twice a year; once after winter and once after summer

Rainfall Sensor Access

1. Unscrew the rainfall sensor and set aside
2. Clear any debris from inside the **Outdoor Sensor** and also within the rainfall sensor
3. Replace the rainfall sensor and access screw before re-mounting your **Outdoor Sensor**



Maintenance

Hygro-Thermo Sensor Access

1. To access the hygro-thermo sensor, locate the Stevenson house (c) underneath your **Outdoor Sensor**
 2. Unscrew the Stevenson house using a screwdriver (d)
 - Each layer of the Stevenson house is separate; be sure not to drop these when removing
 3. Remove the Stevenson house (e) from the **Outdoor Sensor** and set aside
 4. Clear any debris from around the Hygro-Thermo sensor (f) and between the Stevenson house layers
- ⚠ Do not use liquid to clean this—a soft brush, dry cloth or canned air would be suitable
5. Replace the Stevenson house and screws before re-mounting your **Outdoor Sensor**



Warranty

3 Year Replacement Guarantee

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In addition to the rights and remedies you have under laws relating to your Holman product, we also provide you with a Holman warranty. Holman warrants this product against defects caused by faulty workmanship and materials for 3 years from the date of purchase. During this warranty period Holman will replace any defective product.

In the event of a product being replaced during the warranty period, the warranty on the replacement product will expire 3 years from the purchase date of the original product, not 3 years from the date of replacement.

To the extent permitted by law and without limiting the consumer guarantee, this Holman Replacement Warranty only covers products that have been put to domestic use, and excludes liability for consequential loss or any other loss or damage caused to property of persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some advice, visit Holman Industries website: support.holmanindustries.com.au

If you consider that this warranty covers your defective product, present your defective product and your receipt as proof of purchase to the place of purchase, where the retailer will replace the product for you on our behalf.

Troubleshooting

Question	Answer
Why is my Indoor Display Panel blank?	Press SNOOZE/LIGHT on the Indoor Display Panel to activate Double check AC power is still connected to the Indoor Display Panel It isn't possible to run the activated screen for very long from batteries alone
Why is data from the Outdoor Sensor blank on my Indoor Display Panel ?	Check for the RF CONNECTION INDICATOR —if this is missing it means the connection to the Outdoor Sensor is broken Press SEARCH on the top of the Indoor Display Panel for 5 seconds to re-establish the connection
Why don't my Outdoor Sensor readings seem accurate?	Placement and levelling of your Outdoor Sensor is very important—if it is unbalanced or obstructed, weather readings will not be correct
Why are some temperature readings showing as HH.H or LL.L ?	Weather Index Modes such as Feels Like (-65~50°C) / Wind Chill (-65~18°C) / Heat Index (26~60°C) / Dew Point (-20~60°C) have limited ranges If the temperatures fall outside the range listed above, they will report as LL.L (low) or HH.H (high)
Why is Holman Home listing my location as a foreign city?	Check your mobile device settings to ensure location access has been granted to Holman Home This is required for your weather station to work correctly
Why does my barometric pressure seem inaccurate?	As your barometric pressure is dependent on your altitude, you may need to adjust your Barometric Pressure Offset Refer to Adjusting the Barometric Pressure Reading for more information

Question	Answer
Why are MONTH and WEEK graphs blank in <i>Holman Home</i>?	MONTH and WEEK graphs in <i>Holman Home</i> display average data over the given time period, with the exception of RAINFALL, which displays the total for each day MONTH and WEEK data in graphs does not include the current day MONTH and WEEK graphs require at least 2 days to be able to plot data into a graph—at the start of each MONTH or WEEK, no data will be shown until data has been logged for the first 2 days This means no data will be shown until the 3rd of each MONTH, or until Wednesday each WEEK
Why is data from the <i>Outdoor Sensor</i> blank on my <i>Indoor Display Panel</i>?	Press SEARCH on the top of the <i>Indoor Display Panel</i> to reconnect the <i>Outdoor Sensor</i> If SEARCH doesn't reconnect the <i>Outdoor Sensor</i>, press SYNC on the <i>Outdoor Sensor</i> followed by SEARCH on the <i>Indoor Display Panel</i>, to have both units searching and broadcasting
How can I turn off time ALARMS and weather ALERTS?	ALARMS and ALERTS can be turned on and off from the <i>Indoor Display Panel</i> Remove ALARMS: press MODE on the top of the <i>Indoor Display Panel</i> to access the 1 and 2 time ALARMS Press — on top of <i>Indoor Display Panel</i> to remove ALARMS (the  icon will disappear) The <i>Holman Home</i> alarms will also be disabled Remove ALERTS: press MODE on the top of the <i>Indoor Display Panel</i> to cycle through ALARMS and access the max.  and min.  outdoor weather ALERTS Press — on top of <i>Indoor Display Panel</i> to remove outdoor weather ALERTS (the  or  icon will disappear) The <i>Holman Home</i> alerts will also be disabled



**Thanks for being a
#SMARTGARDENER**



We really appreciate having you as a customer, and would like to say thank you for choosing us.

We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an extended warranty. Keep up to date to with relevant product information and special offers available through our newsletter.



www.holmanindustries.com.au/product-registration/

Thanks again for choosing Holman

HOLMAN

For the #SMARTGARDENER   